



STOVE/OVEN

All of our RV's are equipped with a propane combination stove/oven or a propane cooktop only. The propane is supplied by the on-board propane tank. The following procedures tell you how to light the burners on the cooktop and the pilot light for the oven.

TO LIGHT THE BURNERS

- 1.) Make certain the propane valve is open on the propane tank and you have plenty of propane.
- 2.) Light a match or lighter and hold it near the small holes on the orifice of the burner you wish to light.
- 3.) Locate the gas control knob for the burner and turn it on. The burner should light right away.

LIGHTING THE OVEN

- 1.) Make certain the propane valve is open on the propane tank and you have plenty of propane.
- 2.) Light a match or lighter and hold it near pilot light located under the bottom oven rack towards the back of the oven.
- 3.) Turn the Oven Control Switch to the PILOT position and push the knob in and hold it.
- 4.) Once the pilot light is lit, continue holding the knob down for 15 to 20 seconds to allow the thermocouple to heat up. Release the knob and set the desired oven temperature.

Oven temperatures will vary depending on your altitude. Make adjustments as necessary. The burners on these stoves do not produce as much heat as those on the stove in your house and may take a little getting used to when you're cooking.

To turn the oven pilot light off, simply turn the Oven Control Switch to the OFF position.