



# TV/TV ANTENNA

Some of our units are equipped with TV's and all have a TV antenna. If your unit has a built in TV, it is prewired and doesn't require you to plug it in to a socket or antenna. The following procedures tell you how to operate the TV (If applicable) and the TV antenna. Most of our coaches have a second TV hookup in the bedroom area of the unit.

One thing to keep in mind: if the TV is in sight of the driver, there will most likely be a lock out switch on the coach that won't allow the TV to operate while the ignition key is on. This is to prevent a driver from trying to watch TV while driving. This switch can NOT be bypassed or disconnected. The bedroom TV connections will work while traveling.

## TV ANTENNA

Most of our units have a "crank up" style TV antenna located somewhere in the living area of the coach on the ceiling. Follow these steps to use the antenna.

1.) Turn on the Power Booster switch usually located either near the TV or inside a cabinet door near the antenna crank. There will be a small switch on a wall plate housing a 12v socket and a coaxial socket. When the power booster is on, a small red light will glow on the wall plate.

2.) Turn the antenna crank handle clockwise until it stops. This is extending the antenna on the roof of the coach. Be careful not to overtighten the crank as this can damage the antenna gear mechanism.

3.) Turn the TV on and locate a station in the area.

4.) Just above the antenna crank handle are two "rings". The one nearest the ceiling is stationary and has an arrow on one side of it. The second "ring" is directly below the first and has a matching arrow on it. Grasp the second ring, pull down on it and rotate the antenna at the same time to adjust for the best signal. The picture on the TV should be clear when you found the best antenna position.

**CAUTION: DO NOT LEAVE THE ANTENNA UP WHILE DRIVING. IT ISN'T DESIGNED FOR THIS AND WILL MOST LIKELY BE DAMAGED IF YOU DRIVE WITH IT UP.**

To lower the antenna you should grasp the second "ring", pull down and rotate the antenna until the arrows on the two rings match up. Turn the antenna crank handle counter clockwise until it stops turning. Again, do not overtighten the crank.

## TV

The TV works just like the one at your house. It operates off of 110v electricity and has a remote control. Locate the remote, make sure you have electricity either from the generator or a land based source and turn the TV on.

If a gaming system of any kind is hooked up to the TV you must return all cables and connections to their original location at the time of your pick up. If any modifications or adjustment made to the wiring are not returned to its original settings charges for labor and parts will apply for the repair. (posted labor and parts charges are noted in the office)

## **REAR TV HOOKUP**

If you've brought a TV for the coach, you can plug it in to the socket provided. It is equipped for either 12v or 110v televisions. You'll need a short piece of coaxial cable to connect from the TV to the antenna hookup on the wall plate where you plugged in. In most cases, you will still need to have the antenna power booster on and the antenna extended to receive a good signal.

If your coach doesn't have a TV built in, you would follow the above procedures to connect it either in the front of the coach or in the bedroom area.

## **PARK CABLE TV HOOKUP**

Many of our coaches are prewired for cable television. If the park your staying in has cable TV, you'll need to rent or borrow coaxial cable from the park office. Connect one end of the cable to the park's cable system hookup and the other end to the cable TV socket on the coach. If your coach is wired for it, it will usually be located on the drivers side toward the rear. Sometimes it's in one of the rear compartments. Your check out agent showed you this connection during your walk-thru.

When using the park cable, you won't have to use the antenna or the power booster.

If the TV doesn't work, first check to see if the coach is getting 110v power. (A quick check is to look at the clock display on the microwave oven. If it's lit up, you have power.)

If you have power, the TV should work.

If the TV works but doesn't have a good picture you should check the following.

- 1.) Is the power booster on?
- 2.) Is the antenna extended?
- 3.) Is the antenna adjusted properly?

If you've checked all these things and it still doesn't work, call our customer service line for assistance.